


INDUSTRIAL TEST SYSTEMS, INC.

TURBIDITY TEST

5

Tap **'SELECT Test'** at the top. Tap Turbidity. The iDip and app will both display Turbidity.

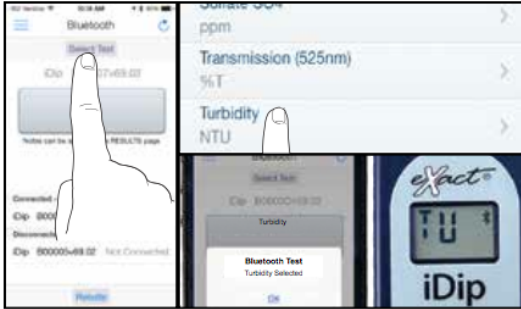

10

READ result displayed in the app. The iDip® cannot display result as NTU so will show "Er1". This will be fixed in a future app update. To run additional tests, repeat steps 5-9. To save your results and make available for emailing, continue on page 11 of your manual. After testing is complete, rinse CELL immediately.



6

Rinse the cell 3 times with Distilled or Deionized water and **FILL** to the top to begin test.



7

Press **ZERO/ON** and the iDip® display reads 0_{PPM} indicating the meter is ready to test.



8

Rinse the cell 3 times with the water sample to be tested and **FILL** to the top.



9

Press **READ**.

